

IDENTIFICATION

PRODUCT CODE: MAINDEC-8E-D0FC-D
PRODUCT NAME: RANDOM ISZ TEST
DATE CREATED: JUNE 11, 1971
MAINTAINER: DIAGNOSTIC GROUP
AUTHOR: BRUCE HANSEN

COPYRIGHT © 1971
DIGITAL EQUIPMENT CORPORATION

)

)

)

,

.

1. ABSTRACT

THIS PROGRAM IS WRITTEN TO TEST THE ISZ INSTRUCTION OF THE PDP-8E. AN ISZ INSTRUCTION IS PLACED IN A FROM LOCATION, AND A TO LOCATION CONTAINS THE OPERAND. PART 1 OF THE PROGRAM SELECTS FROM, TO, AND OPERAND FROM A RANDOM NUMBER GENERATOR, WITH THE OPTION OF HOLDING ANY OR ALL CONSTANT. PART 2 USES A FIXED SET OF FROM, TO, AND OPERAND NUMBERS.

2. REQUIREMENTS

2.1 EQUIPMENT

ONE PDP-8E EQUIPPED WITH TELETYPE.

2.2 STORAGE

THIS PROGRAM USES LOCATIONS 0000-7600(8). THE BINARY LOADER MUST BE STORED IN THE LAST MEMORY PAGE.

2.3 PRELIMINARY PROGRAM

MAINDEC-8E-D0A(N), AND MAINDEC-8E-D0B(N) MUST HAVE RUN SUCCESSFULLY.

3. LOADING PROCEDURE

THE STANDARD BINARY LOADER IS USED.

4. STARTING PROCEDURE

4.1 SWITCH SETTINGS

SR0(0) = HALT ON ERROR
SR1(1) = ELIMINATE ERROR PRINTOUTS
SR3 = FIXED FROMS (1)
RANDOM FROMS (0)
SR4 = FIXED TOS (1)
RANDOM TOS (0)
SR5 = FIXED OPERAND (1)
RANDOM OPERAND (0)
SR9(0) = DO ONE ISZ ONLY
SR11(1) = DO TEST PART 2 SR3, 4, 5, MUST BE 0'S
SR11(0) = DO TEST PART 1

4.2 STARTING ADDRESS

4,3

OPERATOR ACTION

- A. SET SR (SWITCH REGISTER) TO 0200 AND PRESS LOAD ADDRESS.
- B. SET SR TO DESIRED MODE OF OPERATION; FOR MOST RUNS, SR9=0
ALLOWS THE MOST TESTING IN THE LEAST AMOUNT OF TIME.

FOR FIXED FROM, TO, OR OPERAND USAGE, THE FIXED NUMBER MAY BE SELECTED AND ENTERED INTO THE MEMORY LOCATIONS SHOWN BELOW:

FROM =0002
 TO =0021
 OPERAND =0022

C. PRESS, CLEAR AND THEN CONTINUE.

5. OPERATING PROCEDURE

SAME AS PARAGRAPH 4.

6. ERRORS

6.1 ERROR HALTS AND DESCRIPTION

C(PC)	CAUSE
0002	PERIPHERAL INTERRUPT
0254	HALT ON ERROR, SR0=0

6.2 ERROR PRINTOUTS

F	XXXX	T	YYYY				
0	ZZZZ	F	MMMM	R	NNNN	NS	

6.2.1 PRINTOUT EXPLANATION

- (FROM) F XXXX -THE ISZ INSTRUCTION IN LOCATION XXXX FAILED.
- (TO) T YYYY -THE OPERAND ADDRESS OF THE ISZ INSTRUCTION WAS YYYY.
- (OPERAND) 0 ZZZZ -THE STARTING COUNT IN THE ISZ LOOP WAS ZZZZ.
- (FAILED) F MMMM -THE FAILURE OCCURRED TRYING TO ISZ THE NUMBER MMMM.
- (RESULT) R NNNN -THE RESULT OF THIS ISZ WAS NNNN.
- NS -NO SKIP OCCURRED
- S, -INDICATES A SKIP.

6.2.2 EXAMPLES

A. THE FOLLOWING IS A TYPICAL ERROR PRINTOUT.

```
F 3003 T 5470  
0 3705 F 4777 R 5000 S
```

LINE 1 OF THE PRINTOUT IS A STATEMENT OF THE PROBLEM. IT SAYS THAT LOCATED AT 3003 IS AN ISZ INSTRUCTION INCREMENTING AN OPERAND STORED IN LOCATION 5470. LINE 2 OF THE PRINTOUT GIVES INFORMATION FOR ERROR ANALYSIS. 3705 WAS THE INITIAL OPERAND, 4777 WAS THE OPERAND BEING INCREMENTED WHEN THE ERROR OCCURRED, AND 5000 IS THE OPERAND FOLLOWING THE FAILING INCREMENT. THE S INDICATES THAT THE INCREMENT RESULTED IN A SKIP, THE ERROR HERE IS OBVIOUSLY THAT THE SKIP SHOULD NOT HAVE OCCURRED.

B. THE FOLLOWING IS ANOTHER TYPICAL ERROR PRINTOUT.

```
F 3003 T 5470  
0 3705 F 4777 R 5020 NS
```

THIS IS IDENTICAL TO EXAMPLE (A) EXCEPT THAT A DIFFERENT TYPE OF ERROR HAS OCCURRED. THE RESULT OF INCREMENTING 4777 SHOULD BE 5000, NOT 5020.

6.3 ERROR RECOVERY

THE PROGRAM CONTINUES ON, FOLLOWING AN ERROR PRINTOUT UNLESS SR0=0. AFTER A HALT ON ERROR, PUSH CONTINUE TO RESUME TESTING. WHEN ERRORS EXIST, A FAILING CONDITION CHOSEN FROM THOSE TYPED OUT MUST BE USED WITH THE SCOPE MODE. FOR THE SCOPE MODE, PERFORM THE FOLLOWING STEPS:

- A. STOP THE PROGRAM.
- B. INSERT CHOSEN FROM INTO LOCATION 0002.
- C. INSERT CHOSEN TO INTO LOCATION 0021.
- D. INSERT CHOSEN FAILING OPERAND INTO LOCATION 0022
- E. RESTART PROGRAM WITH CONTROL SWITCHES 1,3,4,5, SET TO 1 AND 9 SET TO A 0.

NOTE: BY SETTING SR0 TO A 0, THE PROGRAM HALTS FOLLOWING THE ERROR PRINTOUT. THE OPERATOR MAY AT THIS TIME SET SWITCHES 1, 3, 4, 5, TO A 1 AND 9 TO A 0 AND PUSH CONTINUE. THE PROGRAM ENTERS A SCOPE MODE USING THE FAILING CONDITIONS JUST PRINTED.

7. RESTRICTIONS

7.1 STARTING RESTRICTIONS

NONE.

7.2 OPERATING RESTRICTIONS


THE INTERRUPT IS ENABLED DURING PROGRAM OPERATION. ANY ATTACHED
DEVICE WHICH MIGHT CAUSE SPURIOUS INTERRUPTS, MUST BE DISABLED.

8. MISCELLANEOUS

8.1 EXECUTION TIME

SR9 = 1. 11,000 ISZ OPERATIONS/SECOND.
SR9 = 0. 3,500 ISZ OPERATIONS/SECOND.

THE TEST LOOP IS SHOWN BELOW:

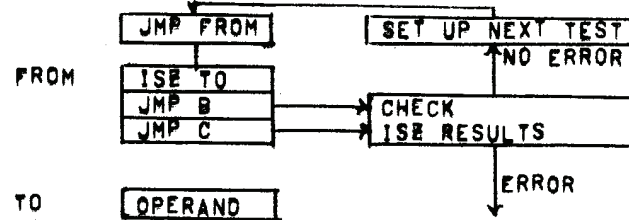

PART 1 OF THE PROGRAM USES A RANDOM NUMBER GENERATOR TO SELECT THE FROM, TO, AND OPERAND NUMBERS. ONCE SELECTED, THE OPERAND IS INCREMENTED UNTIL IT REACHES ZERO. EACH ISZ IS CHECKED BY DUPLICATING ISZ WITH TAD, IAC, DCA. EACH ITERATION IS ALSO CHECKED FOR THE PROPER SKIP OR NO-SKIP CONDITION.

PART 2 OF THE PROGRAM IS ACTUALLY PART 1, WITH THE RANDOM NUMBER GENERATED REPLACED BY A FIXED NUMBER GENERATOR. SEQUENCING OF EVENTS IS AS FOLLOWS:

(NOTE: 621(8)<MEMORY TEST AREA<7600(8)):

- A. FROM = 621 TO = 624 TEST A SET OF 24 SELECTED OPERANDS. TO SAVE TIME IT IS SUGGESTED THAT SR0 = 0, SO THAT THE ISZ IS PERFORMED ON EACH OPERAND ONLY ONCE INSTEAD OF INCREMENTING IT UNTIL THE ISZ INSTRUCTION SKIPS.
- B. FROM = 621 TO = 625 REPEAT THE SET OF OPERANDS USED IN (A) ABOVE.

THIS SEQUENCE CONTINUES UNTIL TO REACHES THE UPPER LIMIT OF THE MEMORY TEST AREA. FROM IS THEN INCREMENTED BY 1 AND THE PROCESS IS REPEATED. WHEN FROM REACHES THE UPPER LIMIT OF THE MEMORY TEST AREA, THE TEST IS COMPLETE.

IDEALLY, IT IS DESIRABLE TO ISZ EVERY LOCATION FROM EVERY OTHER LOCATION IN THE TEST AREA AND, IN DOING SO, USE ALL 24 OF THE SELECTED WORST CASE OPERANDS FOR EACH SET OF ADDRESSES. THIS IS WHAT PART 2 DOES, BUT IT TAKES MANY DAYS TO COMPLETE THE TEST. IT IS FOR THIS REASON THAT THE PROGRAM USES THE RANDOM NUMBER GENERATOR SYSTEM OF PART 1. PART 2 IS AN ADDITIONAL FEATURE OF THE PROGRAM WITH VERY LIMITED USE.

A FC IS PRINTED AFTER EACH GROUP OF 32,000 TESTS.

)

)

)

/PDP-8E ISZ TEST

/COPYRIGHT 1970, DIGITAL EQUIPMENT CORP., MAYNARD, MASS. 01754

/

/CONSTANTS AND VARIABLES

*0

0000	0000			
0001	5001		JMP 1	/PERIPHERAL INTERRUPT
0002	0002	FRMLOC, 2		/ISZ TEST INSTRUCTION LOCATION
0003	0003	LIMLO, 3		/LOW LIMIT TEST AREA
0004	0000		0	
0005	0000		0	
0006	0202	LIMHI, -7576		/HIGH LIMIT TEST AREA
0007	0547	ASUC, SUC		
0010	0007	MSK7, 0007		/OCTAL CONVERSION MASK
0011	0000	WORK, 0		/IR0
0012	0000	WORK1, 0		/IR1
0013	7401	M377, -377		
0014	3607	NUM, 3607		/THE RANDOM NUMBER LOCATION
0015	0003	THREE, 3		
0016	2421	ISZ1, ISZ I TOLOC		/MOVING ISZ
0017	5116	JMP1, JMP BACK		/TEST INSTRUCTION
0020	5141	JMP2, JMP BAKBRN		/GROUP.
0021	0000	TOLOC, 0		/LOCATION TO BE ISZ'D
0022	0000	PATRN, 0		/STARTING ISZ PATTERN
0023	0000	BEFOR, 0		/FAILING PATTERN BEFORE FAILING ISZ
0024	0000	AFTER, 0		/PREDICTED RESULTS OF EACH ISZ
0025	0004	K4, 4		/SWITCH REGISTER MASKS
0026	0400	K0400, 0400		
0027	0200	K0200, 0200		
0030	0100	K0100, 0100		
0031	0000	NOTE, 0		/7'S=ERROR WITH NO SKIP
0032	0257	PRINT, INF1-1		/0'S=ERROR WITH SKIP
0033	0201	AERR1, ERR1		
0034	0206	AERR2, ERR2		
0035	0413	APDR, PDR		
0036	1014	ITADNM, TAD NUM		
0037	0600	ATFCLF, TFCLF		

/SR0(0)=HALT AFTER ERROR PRINTOUT

/SR1(1)=NO PRINTOUTS

/SR3(1) = HOLD FROM CONSTANT

/SR4(1) = HOLD TO CONSTANT

/SR5(1) = HOLD PATTERN CONSTANT

/SR9(0) = DO ONE ISZ ONLY

/SR11(1) = DO TEST PART 2

/

/

/PROGRAM START

0040	4441	START, JMS I .+1	/ION
0041	0614	PATCH	/LAS
0042	0015	AND THREE	

0043	7640		SZA CLA	/SKIP IF PART 1
0044	5426		JMP I K0400	/GO TO PART 2
0045	1036		TAD ITADNM	
0046	3165		DCA RANUM+1	
			/CHECK FOR FIXED PATTERN	
0047	7604	CHEK1,	LAS	
0050	0030		AND K0100	
0051	7440		SZA	
0052	5055		JMP CHEK2	
			/SELECT THE PATTERN	
0053	4164	SELPAT,	JMS RANUM	
0054	3022		DCA PATRN	
			/CHECK FOR FIXED TO	
0055	7604	CHEK2,	LAS	
0056	0027		AND K0200	
0057	7640		SZA CLA	
0060	5065		JMP CHEK3	
			/SELECT THE TO LOCATION	
0061	4164	SELTO,	JMS RANUM	
0062	3021		DCA TOLOC	
0063	1021		TAD TOLOC	
0064	4151		JMS LIMTST	
			/CHECK FOR FIXED FROM	
0065	7604	CHEK3,	LAS	
0066	0026		AND K0400	
0067	7640		SZA CLA	
0070	5075		JMP PLCINT	
			/SELECT THE FROM LOCATION	
0071	4164	SELFRM,	JMS RANUM	
0072	3002		DCA FRMLOC	
0073	1002		TAD FRMLOC	
0074	4151		JMS LIMTST	
			/PLACE FROM INSTRUCTIONS	
0075	7240	PLCINT,	CLA CMA	
0076	1002		TAD FRMLOC	
0077	3011		DCA WORK	
0100	1016		TAD ISZ1	
0101	3411		DCA I WORK	
0102	1017		TAD JMP1	
0103	3411		DCA I WORK	
0104	1020		TAD JMP2	
0105	3411		DCA I WORK	
			/DEPOSIT PATTERN IN TO LOCATION	
0106	1022		TAD PATRN	
0107	3421		DCA I TOLOC	

```

                                /STORE PREDICTED ISZ RESULT
0110 1022                        TAD PATRN
0111 3023                        DCA BEFOR
                                LUP1, TAD BEFOR
0112 1023                        IAC
0113 7001                        DCA AFTER
0114 3024                        JMP I ASUC
0115 5407

                                /RETURN FOR NO SKIP CONDITION
0116 7604                        BACK, LAS
0117 7004                        RAL
0120 7710                        SPA CLA
0121 5132                        JMP LAS1
0122 1421                        TAD I TOLOC
0123 7041                        CIA
0124 1024                        TAD AFTER
0125 7640                        SZA CLA
0126 5433                        JMP I AERR1      /ERROR IN ISZ OPERATION
0127 1421                        TAD I TOLOC
0130 7650                        SNA CLA
0131 5433                        JMP I AERR1      /ERROR IN ISZ SKIP DETECTION
0132 7604                        LAS1, LAS
0133 0025                        AND K4
0134 7650                        SNA CLA      /SKIP IF NOT ONE ISZ (SR9)
0135 5047                        JMP CHEK1
0136 7001                        IAC
0137 1023                        TAD BEFOR
0140 5111                        JMP LUP1-1

                                /RETURN FOR SKIP CONDITION
0141 7604                        BAKBRN, LAS
0142 7004                        RAL
0143 7710                        SPA CLA
0144 5047                        JMP CHEK1
0145 1421                        TAD I TOLOC
0146 7640                        SZA CLA      /SKIP IF TO LOCATION OK
0147 5434                        JMP I AERR2      /ERROR IN ISZ LOCATION
0150 5047                        JMP CHEK1

                                /TEST HIGH-LOW LIMITS
0151 0000                        LIMTST, 0
0152 7510                        SPA
0153 5160                        JMP ,+5
0154 1003                        TAD LIMLO
0155 7700                        SMA CLA
0156 5551                        JMP I LIMTST
0157 5165                        JMP RANUM+1
0160 1006                        TAD LIMHI
0161 7700                        SMA CLA
0162 5165                        JMP RANUM+1
0163 5551                        JMP I LIMTST

```

```

0164 0000
0165 1014
0166 7104
0167 7430
0170 1015
0171 3014
0172 1014
0173 5564

0174 1000
0175 0000

0200 0200
0200 5040

0201 1340
0202 3332
0203 7040
0204 3031
0205 9210

0206 1331
0207 3332
0210 1002
0211 3011
0212 1370
0213 4342

0214 1021
0215 3011
0216 1371
0217 4342

0220 1022
0221 3011
0222 1372
0223 4342
0224 1023
0225 3011
0226 1373
0227 4342

0230 1421
0231 3011
0232 1374
0233 4342

0234 6002
0235 1032
0236 3011
0237 1411

```

/RANDOM NUMBER GENERATOR

```

RANUM, 0
TAD NUM
RAL CLL
SEL
TAD THREE
DCA NUM
TAD NUM
JMP I RANUM

```

/AC=NEW RANDOM NUMBER

```

K1000, 1000
KP, 0

```

*200

```

JMP START
/ERROR ROUTINE 1
ERR1, TAD SKPDAT+6
DCA SKPDAT
CMA
DCA NOTE
JMP KPGO

```

/ERROR ROUTINE 2

```

ERR2, TAD SKPDAT-1
DCA SKPDAT
KPGO, TAD FRMLOC
DCA WORK
TAD A3
JMS SETUP

```

```

TAD TOLOC
DCA WORK
TAD A4
JMS SETUP

```

```

TAD PATRN
DCA WORK
TAD A5
JMS SETUP
TAD BEFOR
DCA WORK
TAD A6
JMS SETUP

```

```

TAD I TOLOC
DCA WORK
TAD A7
JMS SETUP

```

/TTY PRINT ROUTINE

```

TTY, IOF
TAD PRINT
DCA WORK
TAD I WORK

```

0240 6046
 0241 6041
 0242 5241
 0243 1013
 0244 7640
 0245 5237
 0246 6042
 0247 6001
 0250 7604
 0251 7700
 0252 7402

TLS
 TSF
 JMP .-1
 TAD M377
 SZA CLA
 JMP TTY+3
 TCF
 ION
 LAS
 SMA CLA
 HLT

/HALT AFTER ERROR (SR0)

0253 1031
 0254 7650
 0255 5047
 0256 3031
 0257 5132

TAD NOTE
 SNA CLA
 JMP CHEK1
 DCA NOTE
 JMP LAS1

/RETURN TO NO SKIP ROUTINE

0260 0306
 0261 0240
 0262 0000
 0263 0000
 0264 0000
 0265 0000
 0266 0240
 0267 0240
 0270 0324
 0271 0240
 0272 0000
 0273 0000
 0274 0000
 0275 0000
 0276 0215
 0277 0212
 0300 0215
 0301 0215

```

/ERROR PRINT OUT LINE 1
INF1, 306 /F FROM (INSTRUCTION LOCATION)
      240 /SPACE
INDATA, 0 /X LOCATION
      0 /X
      0 /X
      0 /X
      240 /SPACE
      240 /SPACE
      324 /T TO (OPERAND ADDRESS)
      240 /SPACE
ONDATA, 0 /X ADDRESS
      0 /X
      0 /X
      0 /X
      215 /CR
      212 /LF
      215 /CR
      215 /CR
  
```

0302 0317
 0303 0240
 0304 0000
 0305 0000
 0306 0000
 0307 0000
 0310 0240
 0311 0240
 0312 0306
 0313 0240
 0314 0000
 0315 0000
 0316 0000
 0317 0000
 0320 0240

```

/ERROR PRINTOUT LINE 2
      317 /O OPERAND (STARTING COUNT)
      240 /SPACE
STDATA, 0 /X PATTERN
      0 /X
      0 /X
      0 /X
      240 /SPACE
      240 /SPACE
      306 /F FAILING COUNT
      240 /SPACE
FLDATA, 0 /X PATTERN BEFORE FAILING ISZ
      0 /X
      0 /X
      0 /X
      240 /SPACE
  
```

0321 0240
0322 0322
0323 0240

240 /SPACE
322 /R
240 /SPACE

RESULT AFTER FAILURE

0324 0000
0325 0000
0326 0000
0327 0000
0330 0240
0331 0240
0332 0316
0333 0323
0334 0215
0335 0212
0336 0212
0337 0377
0340 0316
0341 0323

RSDATA, 0 /X
0 /X
0 /X
0 /X
240 /SPACE
240 /SPACE
SKPDAT, 316 /N
323 /S
215 /CR
212 /LF
212 /LF
377 /RUBOUT
316 /N
323 /S

PATTERN AFTER FAILING ISZ

NO
SKIP

0342 0000
0343 3012
0344 1011
0345 7006
0346 7006
0347 4362
0350 7012
0351 7012
0352 7012
0353 4362
0354 7012
0355 7010
0356 4362
0357 4362
0360 7200
0361 5742
0362 0000
0363 0010
0364 1375
0365 3412
0366 1011
0367 5762

SETUP, 0
DCA WORK1
TAD WORK
RTL
RTL
JMS MORSU
RTR
RTR
RTR
RTR
JMS MORSU
RTR
RAR
JMS MORSU
JMS MORSU
CLA
JMP I SETUP
MORSU, 0
AND MSK7
TAD TW6
DCA I WORK1
TAD WORK
JMP I MORSU

/PAGE 1 CONSTANTS

0370 0261
0371 0271
0372 0303
0373 0313
0374 0323
0375 0260

A3, INDATA-1
A4, ONDATA-1
A5, STDATA-1
A6, FLDATA-1
A7, RSDATA-1
TW6, 0260

/PART 2 INITIALIZATION ROUTINE

0400
1003

*400
TAD LIMLO

0401	7041		CIA	
0402	3310		DCA FROM	/LOW LIMIT TO FROM
0403	1003		TAD LIMLO	
0404	7040		CMA	
0405	3311		DCA TO	
0406	1346		TAD A0	
0407	3313		DCA PATCYC	
0410	1314		TAD INST1	
0411	3165		DCA RANUM+1	
0412	5047		JMP CHEK1	/GO TO PAGE 0 START
			/PATH DECISION ROUTINE	
0413	1164	PDR,	TAD RANUM	
0414	7041		CIA	
0415	1305		TAD GFROM	
0416	7650		SNA CLA	/SKIP IF NOT REQUESTING FROM
0417	5303		JMP FRUT	/GO TO FROM ADDRESS ROUTINE
0420	1164		TAD RANUM	
0421	7041		CIA	
0422	1306		TAD GTO	
0423	7650		SNA CLA	/SKIP IF NOT REQUESTING TO
0424	5301		JMP TORUT	/GO TO TO ADDRESS ROUTINE
0425	5226		JMP PRUT	/GO TO PATTERN ROUTINE
			/SELECT PATTERN AND OTHER THINGS	
0426	1713	PRUT,	TAD I PATCYC	
0427	3312		DCA PATT	
0430	1312		TAD PATT	
0431	7450		SNA	/NO SKIP IF END OF PATTERN TABLE
0432	5240		JMP .+6	/END PATTERN TABLE LOOK AROUND
0433	7201		CLA IAC	
0434	1313		TAD PATCYC	
0435	3313		DCA PATCYC	
0436	1312		TAD PATT	
0437	5564		JMP I RANUM	/RETURN, AC=NEW PATTERN
			/	
0440	1345		TAD AK7776	
0441	3313		DCA PATCYC	/RESTOR START ADDRESS OF PATT. TABLE
0442	7001		IAC	
0443	1311		TAD TO	
0444	3311		DCA TO	/INCREMENT TO
0445	1311		TAD TO	
0446	7041		CIA	
0447	1310		TAD FROM	
0450	7640		SZA CLA	/SKIP IF TO = FROM
0451	5255		JMP .+4	
0452	1311		TAD TO	
0453	1015		TAD THREE	
0454	3311		DCA TO	/SKIP AROUND FROM
0455	1311		TAD TO	
0456	7500		SMA	
0457	5276		JMP GOUT	

0460 1006
 0461 7710
 0462 5276
 0463 7201
 0464 1310
 0465 3310
 0466 1003
 0467 7041
 0470 3311
 0471 1310
 0472 1006
 0473 7710
 0474 5276
 0475 5200
 0476 7200
 0477 1312
 0500 5564

TAD LIMHI
 SPA CLA /SKIP IF END TEST AREA
 JMP GOUT
 CLA IAC
 TAD FROM
 DCA FROM /ADVANCE FROM
 TAD LIMLO
 CIA
 DCA TO /RESET TO ADDRESS
 TAD FROM
 TAD LIMHI
 SPA CLA
 JMP GOUT
 JMP 400
 GOUT, CLA
 TAD PATT
 JMP I RANUM

0501 1311
 0502 5564

TORUT, /SELECT TO ROUTINE
 TAD TO
 JMP I RANUM

0503 1310
 0504 5564

FRUT, /SELECT FROM ROUTINE
 TAD FROM
 JMP I RANUM

0505 0072

GFROM, /PAGE 3 CONSTANTS
 SELFRM+1 /STORED RETURN ADDRESS WHEN

0506 0062

GTO, SELTO+1 /RANDOM FROM IS REQUESTED
 /STORED RETURN ADDRESS WHEN

0507 0054

GPAT, SELPAT+1 /RANDOM TO IS REQUESTED
 /STORED RETURN ADDRESS WHEN

0510 0000

FROM, 0 /RANDOM PATTERN IS REQUESTED
 /CURRENT FROM ADDRESS

0511 0000

TO, 0 /CURRENT TO ADDRESS

0512 0000

PATT, 0 /CURRENT PATTERN

0513 0000

PATCYC, 0 /CURRENT PATTERN ADDRESS

0514 5435

INST1, JMP I APDR

0515 7776

K7776, 7776

0516 7775

7775

0517 7773

7773

0520 7767

7767

0521 7757

7757

0522 7737

7737

0523 7677

7677

0524 7577

7577

0525 7377

7377

0526 6777

6777

0527 5777

5777

0530 3777

3777

0531 0001

0001

0532 0003

0003

0533 0007

0007

0534 0017

0017

0535	0037		0037
0536	0077		0077
0537	0177		0177
0540	0377		0377
0541	0777		0777
0542	1777		1777
0543	3777	K3777,	3777
0544	0000		0
0545	0515	AK7776,	K7776
0546	0544	A0,	K3777+1

0547	1375	SUC,	TAD CT
0550	7001		IAC
0551	3375		DCA CT
0552	1375		TAD CT
0553	7640		SZA CLA
0554	5437		JMP I ATFCLF
0555	1175		TAD KP
0556	1174		TAD K1000
0557	3175		DCA KP
0560	1175		TAD KP
0561	7640		SZA CLA
0562	5437		JMP I ATFCLF
0563	6002		IOF
0564	1376		TAD INF2
0565	3011		DCA WORK
0566	5767		JMP I .+1
0567	7602		7602
0570	0215		215
0571	0212		212
0572	0306		306
0573	0303		303
0574	0377		377
0575	0000	CT,	0
0576	0567	INF2,	567

0600 *600

/CHECK FOR TO=FROM CONFLICT

0600	1021	TFCLF,	TAD TOLOC
0601	7041		CIA
0602	1002		TAD FRMLOC
0603	7450		SNA
0604	5055		JMP CHEK2
0605	7001		IAC
0606	7450		SNA
0607	5055		JMP CHEK2
0610	7001		IAC
0611	7650		SNA CLA
0612	5055		JMP CHEK2

0613	5402		JMP I FRML0C
0614	0000	PATCH, 0	/RESTORE THEN GO AWAY
0615	3000		DCA 0
0616	1232		TAD X
0617	3001		DCA 1
0620	1233		TAD X1
0621	3002		DCA 2
0622	1234		TAD X2
0623	3003		DCA 3
0624	1235		TAD X3
0625	3040		DCA START
0626	1236		TAD X4
0627	3041		DCA START+1
0630	6001		ION
0631	5614		JMP I PATCH
0632	7402	X,	7402
0633	0000	X1,	0
0634	7157	X2,	7157
0635	6001	X3,	ION
0636	7604	X4,	LAS
	7602	*7602	
7602	1411		TAD I WORK
7603	6046		TLS
7604	6041		TSF
7605	5204		JMP .-1
7606	1013		TAD M377
7607	7640		SZA CLA
7610	5202		JMP .-6
7611	5217		JMP OVR
	7617	*7617	
7617	6042	OVR,	TCF
7620	6001		ION
7621	5437		JMP I ATFCLF

S